



Eligible Drip



Point Source:

1. 1/2" distribution tube
2. 1/4" straight fitting
3. 1/4" distribution tube
4. 1/4" tee fitting
5. 0.5-2 gph emitters

Point Source + Ring:

1. 1/2" distribution tube
2. 1/4" straight fitting
3. 1/4" distribution tube
4. 0.5- 2 gph emitter
5. 1/4" inline tube
6. 1/4" goof plug

Inline:

1. 1/2" inline tube
2. 0.6- 0.9 gph emitter (built in)

Ineligible Drip



Adjustable Bubbler



Microspray Xerispray



All overhead irrigation on drip

*Mixed equipment on a single zone is also ineligible



STEP 1. Drip Conversion

*First, convert an existing irrigation zone to a drip zone



1-5/8" OD, Tubing & Pipe Cutter	x1
Twist Lock Threaded Flush Cap	x1
6" Round Valve Box	x1
Galvanized Steel Stakes	x50
1800 Retrofit Kit w/ Filter & pressure Regulator	x1
1800 Spray Head Caps	x10
1/2" PVC Plug	x10

STEP 2: Select Drip Tubing

*Next, convey irrigation water to plantings in one of two ways

Point Source



Inline



1/2" Tubing 100' Coil, Distribution	x1
1/4" Tubing 100' Coil, Distribution	x1
1/4" Fitting, Barbed Tee	x50
1/4" Fitting, Barbed Coupling	x50
Barbed Drip Emitter, 0.5 GPH, blue	x25
Barbed Drip Emitter, 1 GPH, black	x25
Barbed Drip Emitter, 2 GPH, red	x25
1/4" Drip Tubing Stake	x20
Xeriman, Emitter Installation Tool	x1

1/2" Tubing 100' Coil 12" Space, 0.9 GPH Dripline	x2
1/2" Compression Tee	x5
1/2" Compression Elbow	x5
1/2" Compression Coupling	x5

Want to buy supplies locally? Share these quote numbers with your local irrigation store:

- ◆ Horizon # 2c011780 point source
- ◆ Ewing # 18851387
- ◆ Horizon # 2c011781 in-line
- ◆ Ewing # 18851993