


INFILTRATION PLANTER TYPICAL SECTION

NTS

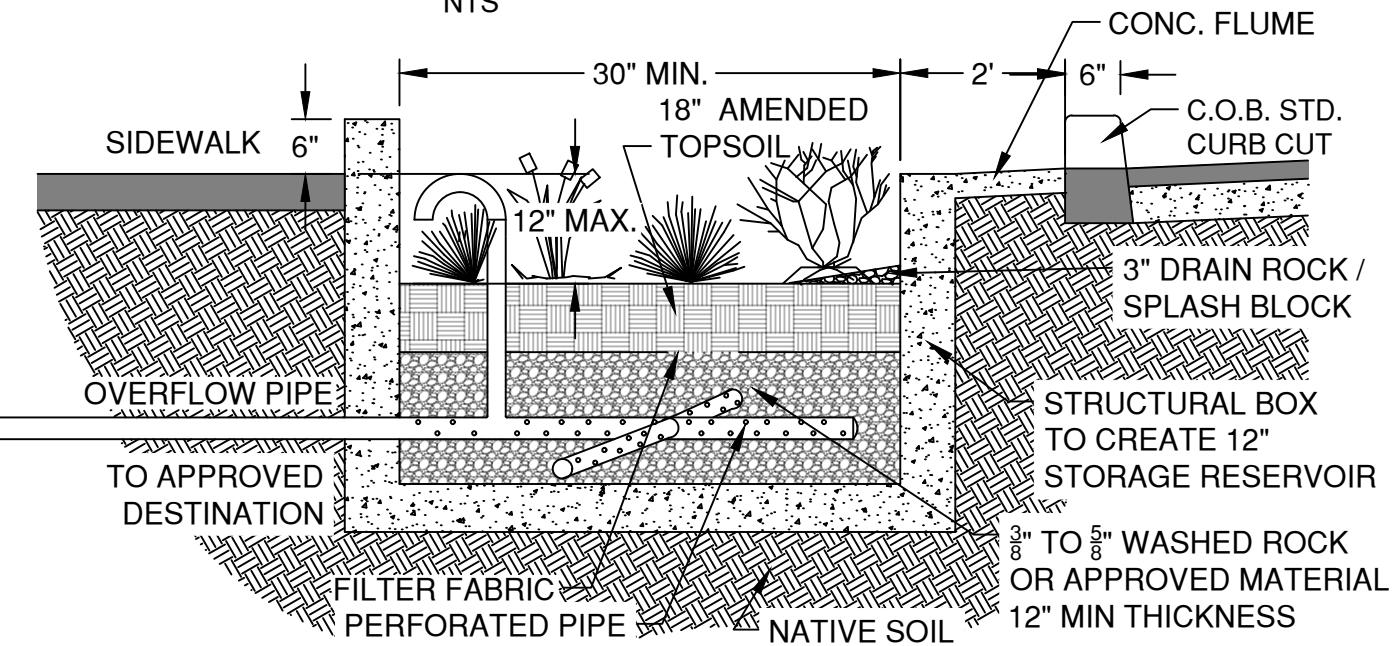

FLOW-THROUGH PLANTER TYPICAL SECTION

NTS

NOTE:

1. NOT FOR USE ALONG STREETS WITH POSTED SPEED ABOVE 25 MPH, UNLESS OUTSIDE THE CLEAR ZONE.
2. AMENDED TOPSOIL PER SPECIFICATION 01040
3. VOLUME AND DEPTH TO BE DETERMINED BY ENGINEER.
4. USE INFILTRATION PLANTER IF EXISTING SITE HAS AN INFILTRATION RATES > 0.5 IN/HR.
5. PLACE OVERFLOW PIPE 2" BELOW TOP OF PLANTER.
6. TO AVOID UIC REGULATION DO NOT USE PERFORATED PIPE OUTSIDE OF THE FLOW-THROUGH PLANTER OR WITH THE INFILTRATION PLANTER.

DRAWN	AJD	 CITY OF BEND	CITY OF BEND STANDARD DRAWING 710 NW WALL ST., BEND, OREGON 97701 STORMWATER PLANTER DETAIL	SCALE	NTS
DIV	STORM			DATE	01/31/2022
REV				APPR	
				STD DWG	STRM-5